

3 TAP HOLE DECKMOUNTED FAUCET MIXER INSTALLATION INSTRUCTIONS

PRIOR INSTALLATION PLEASE ENSURE THAT THE WATER SUPPLY IS "OFF".

- 1 Plan out (if necessary) the 3 hole position for the spout and the 2 valve side bodies. But, ensure that the lengths of the 2 flexible connection tubes are taken into account.

Please note : The flexible connection tubes can be gently looped into a circle for fitting purposes.

- 2 Remove seal assembly and the breech assembly.
Please note it may be necessary to untighten gland nut to allow removal of the breech assembly.
- 3 Remove the backnut from the spout fixing thread, and fit spout using retaining screw.
- 4 Fit the spout body in the desired position.
- 5 Hold the spout in position, fit the backnut and fully tighten.
- 6 Refit the breech to the spout and fully tighten the gland nut "B"
Please note : Ensure that the 2 off sealing rings on the breech are both located in the spout and not visible.
- 7 Remove the head, collar and flange from the side valves 2 off.
- 8 Fit the valve in position screw on the flange. Adjust the height of the valve by movement of the flange and finally fully tighten the backnut
Please note : Ensure that the outlet of the valve is in desired position.
- 9 Repeat operation 8, with the second valve.
- 10 Fit the Hot and Cold flexible connection tubes
Please note : The flexible connection tube can be gently looped into a circle for fitting purposes.


IMPORTANT "DO NOT KINK THE FLEXIBLE TUBE" DURING INSTALLATION

- 11 Refit the collar and head to the side valves 2 off
- 12 Fit the pop-up rod into the spout and refit the seal assembly over the rod onto the breech.
- 13 Install pop-up waste assembly. Connect the pop-up rod to the waste assembly (use of pop up extension piece may be required).
Horizontal rod may be cut to suit as required.
- 14 Adjust pop-up plug as necessary to form water tight seal.
- 15 Attach the water feeds to the valves.
- 16 Turn on the water supply and check for water leaks.

Please Note:

It is essential that water fittings are located so they are readily accessible for maintenance without recourse to removing permanent enclosures or decoration. Always leave good natural access or fit an access panel.

It is recommended that this product is fitted by an approved plumber/installer.

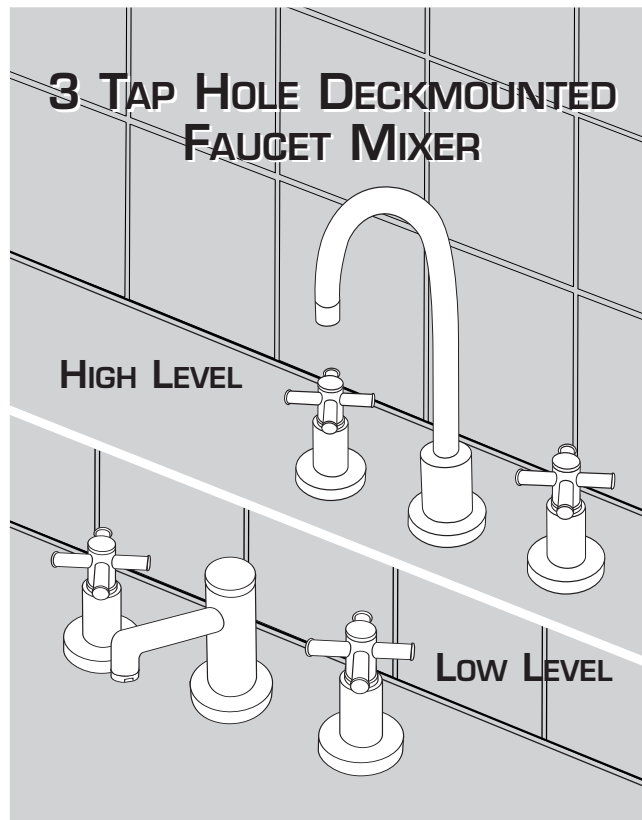

INSTALLATION GUIDE

ISSUE 2003

Control handle may vary depending on model supplied

INSTALLATION

3 TAP HOLE DECKMOUNTED FAUCET MIXER

LIST OF PARTS

Spout Assembly (1 off each)

- Consists: - Spout
- Spout body
- Backnut
- Breech assembly
- *Flow regulators (inserted in spout)

Pop-up Rod (1 off)

Side Valve (2 off each)

- Consists: - Body and valve
- Head and collar
- Flange
- Rubber seal
- Backnut

Flexible Connection Tube (2 off)

Pop-up Waste Assembly

