

SHOWER RAIL




P Shape to Ceiling Shower Bath Rail Installation.

Tools required to complete the installation.

- Electric Drill with 8mm masonry drill bit 
- Suitable Hex Screwdriver 
- Masking tape to ensure tiles are not damaged when drilling 
- Suitable hacksaw 
- Spirit level to get rail level 
- Tape measure 

Suitable for Shower Bath or Regular Bath Wall to Ceiling installations not exceeding 1.85m max

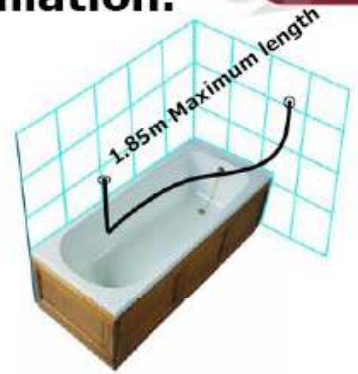

Installation instructions

Note. This rail can be used for both normal and P shaped shower baths. Due to it's design, the user will need to mark and trim both ends of the rail to get a perfect fit with their own bath. Please read the fitting instructions carefully.

Note. the rail is oversized, so you will need to cut some tube from each end.

- Measure the bath length (L1) and write it here.....cm

Transfer this length to your rail and ensure when marked the rail follows the contour of your bath as best you can.

Using a hacksaw, cut rail to length, taking care not to deform the tube as the swivel joint will not fit properly if the tube is oval.

- Once you have the rail cut to length and checked that it will just fit, you will now need to reduce the length of the rail at the curved end by 4cm(L2) to allow for fitting the swivel joint.




- Measure up from the inside base of the bath approximately 190 cm and make a horizontal pencil line where you would like bracket "a" to be positioned. This should be approx 10cm in from the edge of the bath or in-line with the lip.

(This is so the rail and curtain fit perfectly as shower curtains are normally 180cm drop from shower rail)


- Fix masking tape to the area where you will fix bracket "a" and carefully mark, drill and fix the bracket with the screws and rawplugs supplied.
- Insert "swivel joint" into curved end of rod then insert rail into bracket "a" and hold rail horizontally in place. Measure ceiling to rod to get ceiling adapter measurement.
- Cut ceiling rail to size and fit elbow onto both P rail and vertical rail and tighten allen screws with allen key.
- Slide bracket "b" onto ceiling adapter refit rail into place. Now mark, drill and rawplug ceiling. Fix bracket "B" to the ceiling with the screws provided in the kit. Make alignment marks in pencil on swivel bracket, glue and realign the swivel bracket.
- Re assemble rail then tighten the allen screws on both brackets and swivel joint with the allen key provided.



- 1.9m approx height from bottom of bath to shower rail

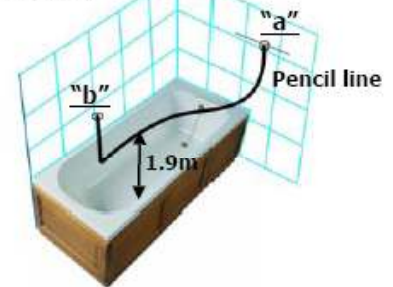

- Tape up area with masking tape
- Mark & drill holes using an 8mm masonry drill
- Add rawplugs & fix bracket "a" to tiled wall

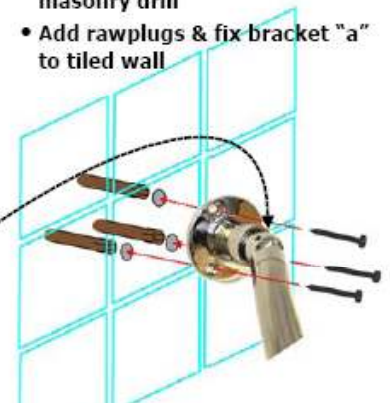

- Ensure rod is level and straight
- Mark new bracket and repeat above procedure then fix rail in place

